



Assembly Guide



E3200 AND E3200HRT
UPRIGHT FITNESS CYCLES

Assembly Guide


E3200 AND E3200HRT UPRIGHT FITNESS CYCLES

To avoid possible damage to this Fitness Cycle, please follow these assembly steps in the correct order. Before proceeding, find your new Fitness Cycle's serial number located on the front axle tube, and enter here:

Refer to this number when calling for service, and enter this serial number on your Warranty Card and in your own records. Be sure to read your Owner's Guide before using your new Fitness Cycle.


If any parts, hardware or tools are missing, please call 1.800.335.4348, Extension 12

NOTE: It is recommended that you apply grease to the threads of each bolt as you assemble your Fitness Cycle, to prevent loosening and noise. Also, during each assembly step, ensure that ALL screws are in place and partially threaded in before completely tightening any ONE screw.

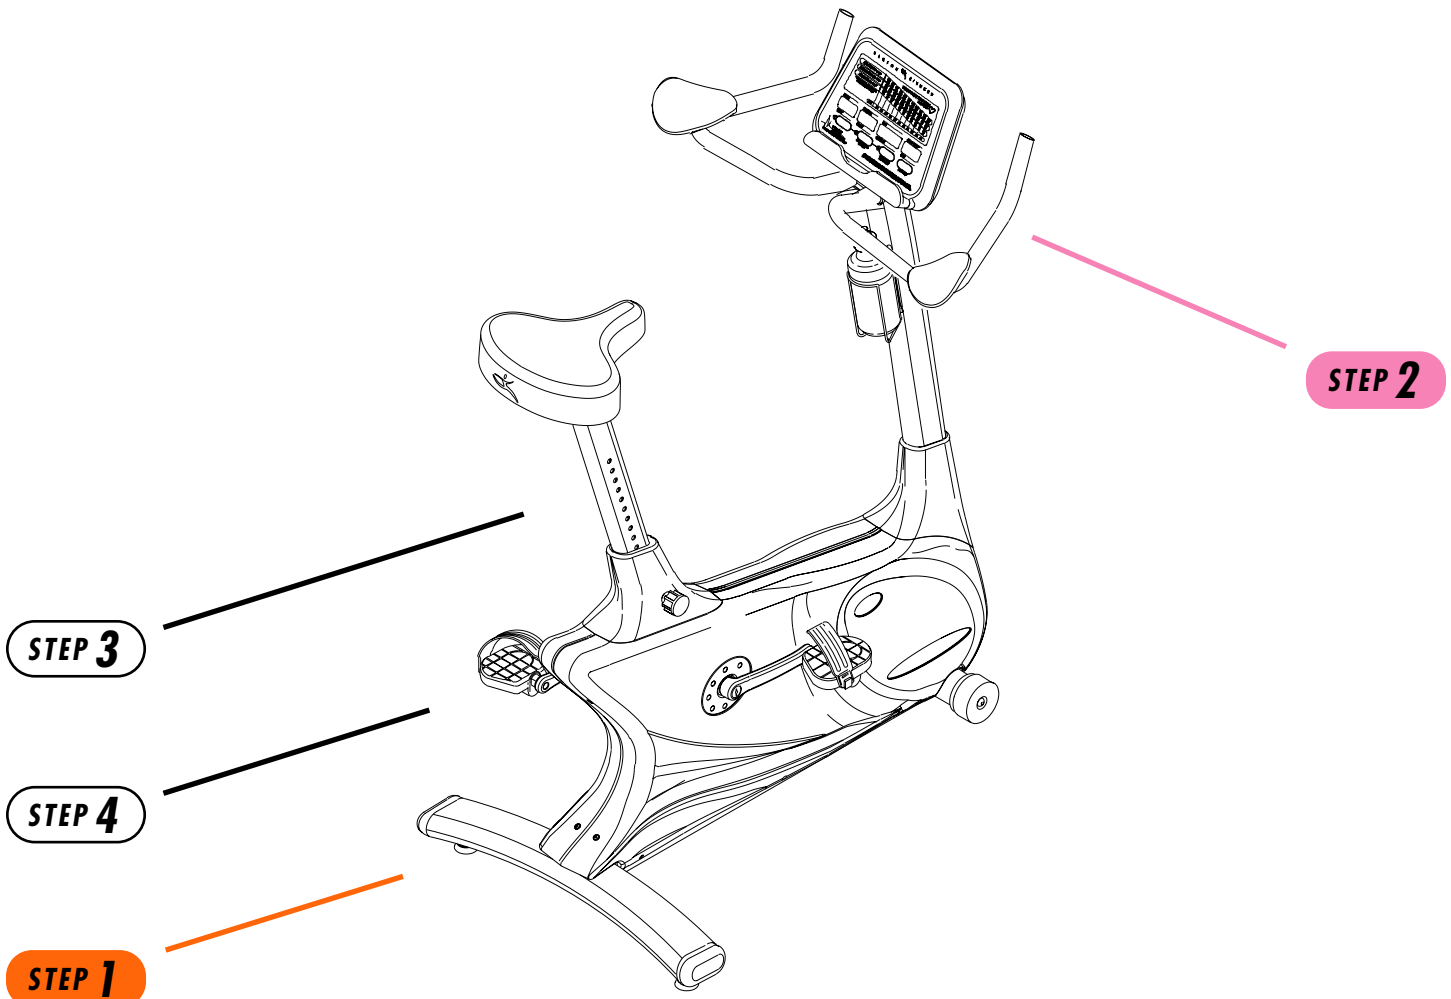


TOOLS & PARTS INCLUDED


Screwdriver





5^{mm} Allen Wrench

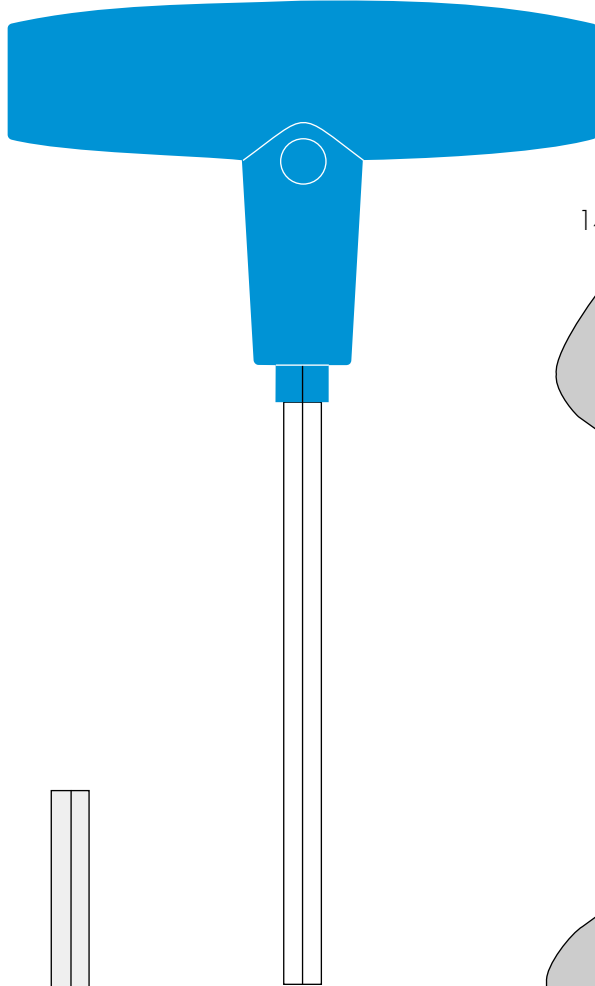

14^{mm} Wrench

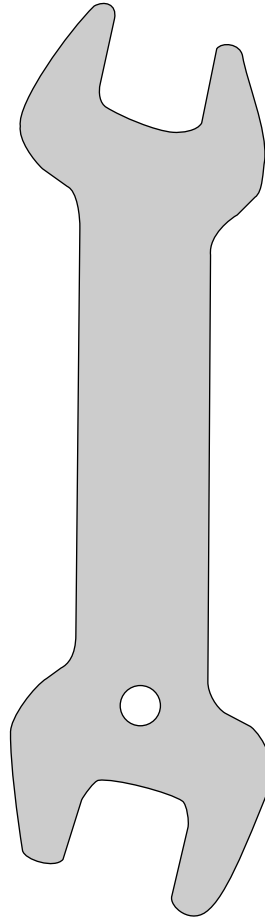

15^{mm} Pedal Wrench

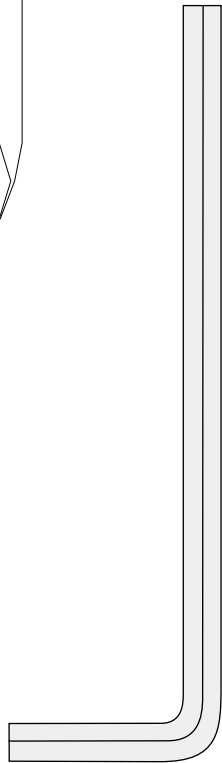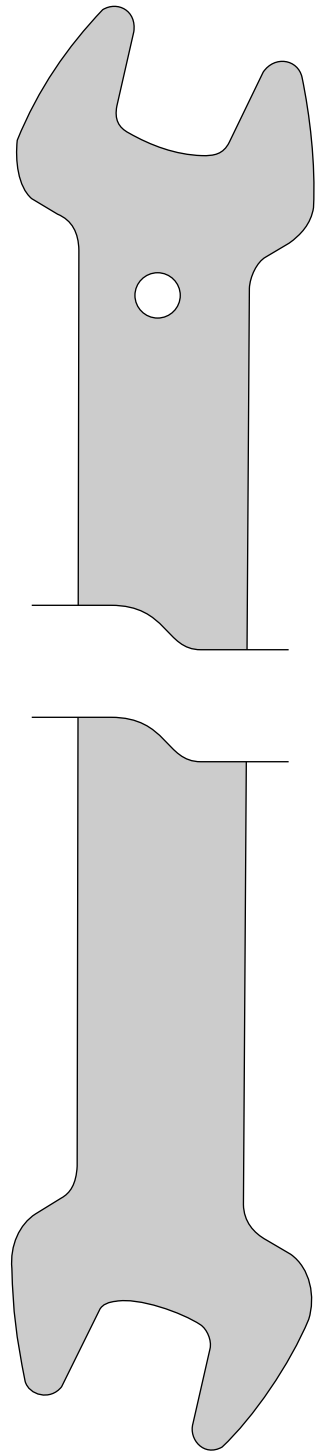


5^{mm} L-Shaped Wrench

PARTS BOX

Water Bottle & Bracket, Qty: 1
Heart Rate Chest Strap, Qty: 1
(E3200HRT only)
Power Supply, Qty: 1
Pedals, Qty: 2
Seat Post Knob, Qty: 1
Owner's Guide, Qty: 1
Assembly Guide, Qty: 1
Warranty Card, Qty: 1


HARDWARE INCLUDED

ORANGE BAG

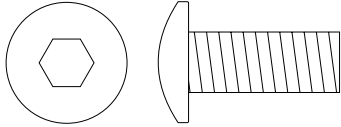


M8 x 20L Screw
Quantity: 2

M8 Lock Washer
Quantity: 4

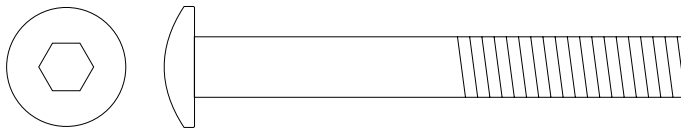


M8 x 65L Screw
Quantity: 2


PINK BAG

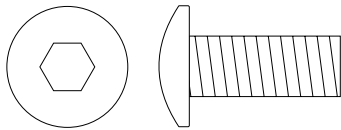

M8 x 15L Screw
Quantity: 7

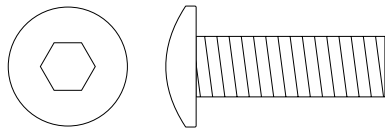


M8 x 20L Screw
Quantity: 2



M8 Lock Washer
Quantity: 8

STEP 1**ORANGE BAG**


- Slide the rear foot into place and secure with two screws (M8x20L) and two lock washers (M8) to the outside holes. Secure with two screws (M8x65L) and two lock washers (M8) to the inside holes. Tighten with the 5^{mm} Allen wrench.

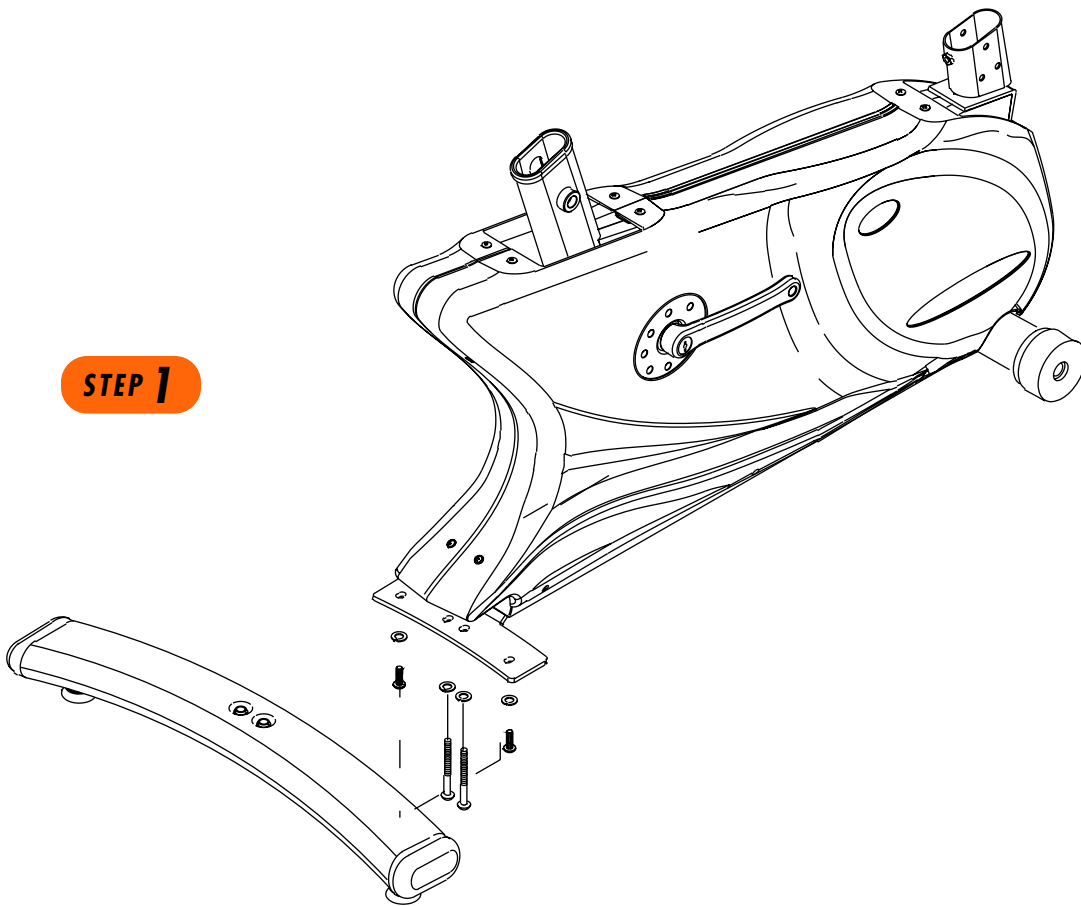STEP 1

STEP 2

PINK BAG

STEP 2

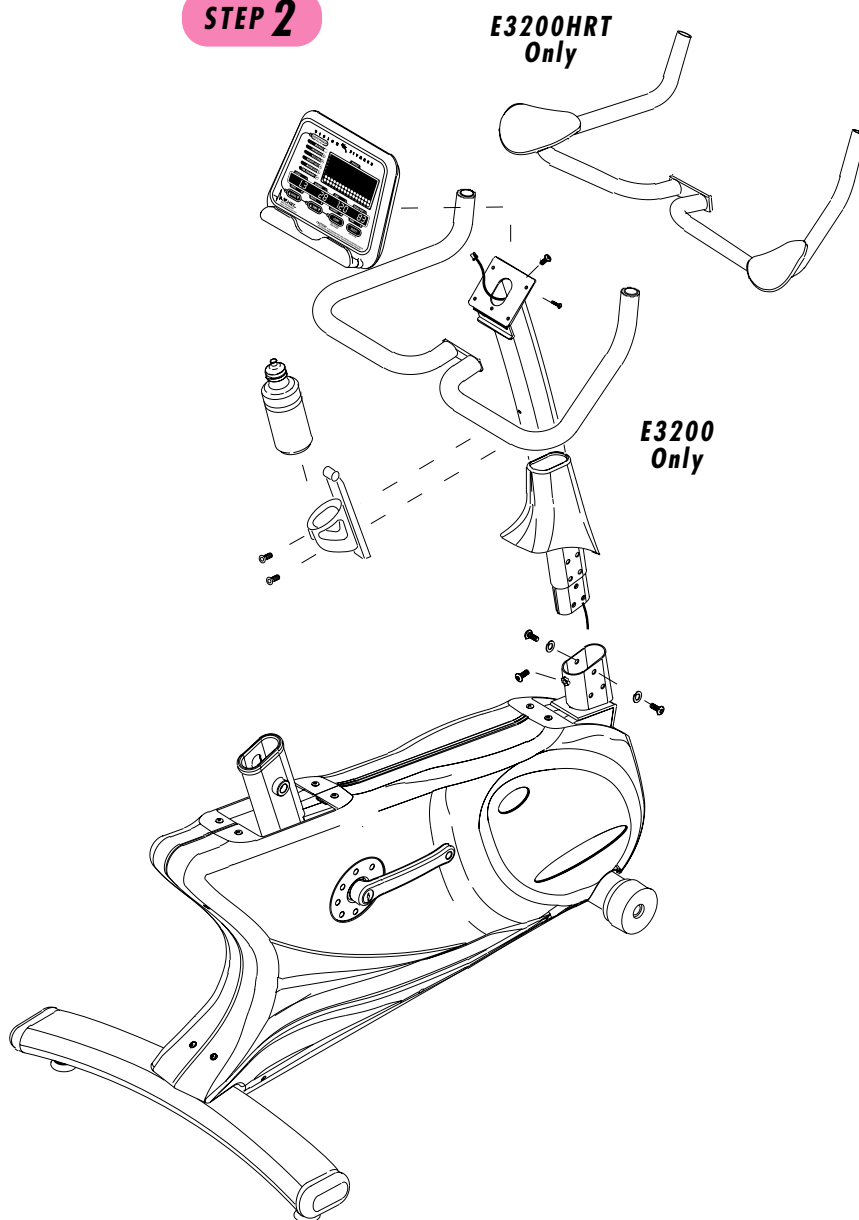

- Slide the console mast cover onto the console mast. Attach the included wire tie in the console mast to the wire harness coming from the frame. Pull this wire trough the console mast while simultaneously attaching the console mast to the frame. Secure the console mast to the frame by tightening the seven screws (M8x15L) and six lock washers (M8) with the 5^{mm} Allen wrench. Slide the console mast cover into place so it integrates with the frame.

- Secure the handlebar onto the handlebar bracket with two screws (M8x20L) and two lock washers (M8). Tighten with the 5^{mm} Allen Wrench.

- Remove the four mounting screws from the back of the console. Connect the wire harness to the console. Attach the console to the console mast using the four mounting screws.


- Mount the water bottle bracket to the console mast with the included screws.

STEP 3

SEAT

- Slide the seat post cover onto the seat post.
- Slide the seat post into the frame and lower the seat post cover into place.
- Screw the adjustment knob through the seat post cover and into place on the frame.
- Attach the seat to the seat post by tightening the screws on the underside of the seat. Use the 14^{MM} wrench.



STEP 3

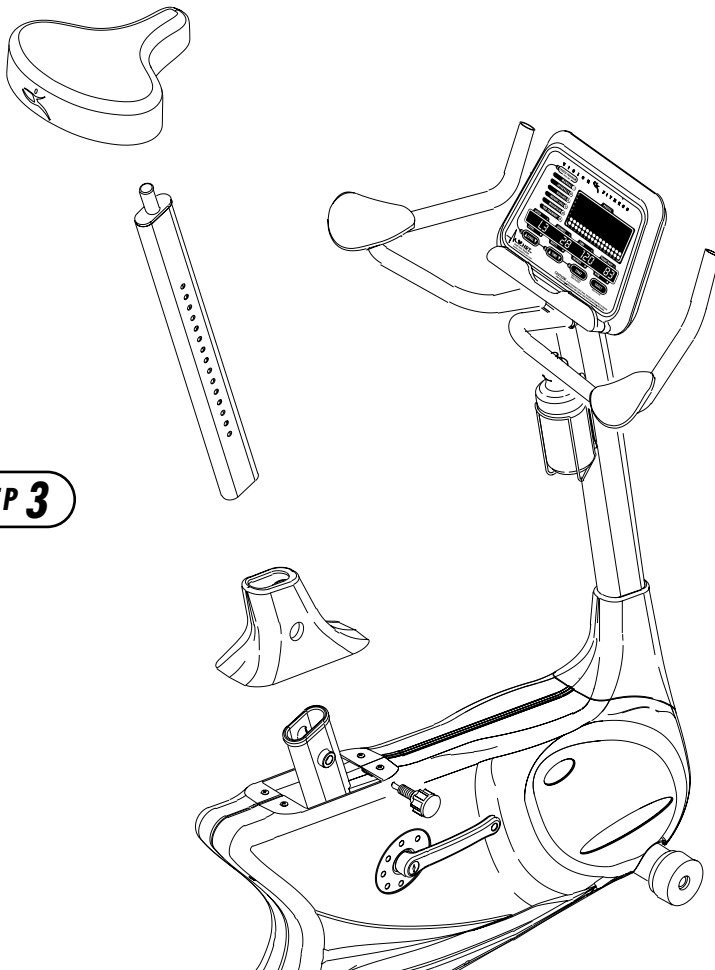

STEP 4

PEDALS

- Attach the left and right pedals to the left and right crank arms. Tighten with the 15^{mm} Pedal wrench.

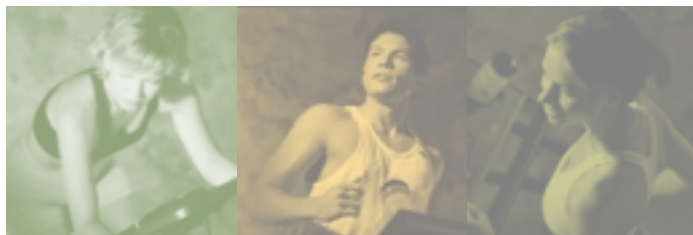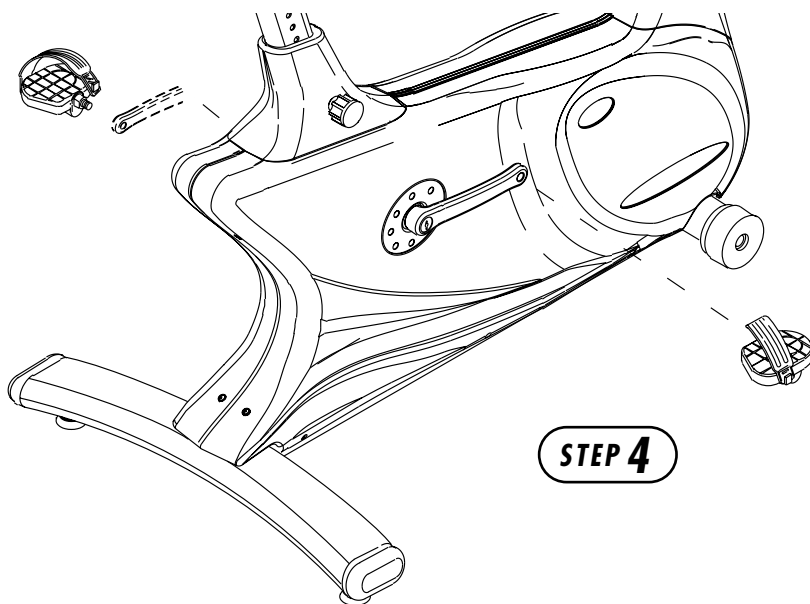

500 South CP Avenue • P.O. Box 280 • Lake Mills, WI 53551
toll free 1.800.335.4348 • phone 1.920.648.4090 • fax 1.920.648.3373
www.visionfitness.com

©2002 Vision Fitness. All Rights Reserved. 6.02 Part #Z32CB25-AG1814PRD
AG18.14PRD
REV1